

# INSTRUCTION MANUAL



## IMPORTANT SAFE GUARDS

### WHEN USING ELECTRIC APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

1. Please read all instructions before using the product.
2. The fan is only for intended use as described in the instructional manual
3. Never insert fingers, pencils or any other objects through the guard
4. To protect against electrical hazard. Do not immerse fan plug or cord in water or spray with liquid
5. Close supervision is necessary when any appliance is used by or near children
6. Unplug fan when not in use. Moving fan to another location or cleaning
7. Avoid contact with moving parts.
8. Do not operate in the presence of explosive and flammable fumes.
9. Do not place fan or any parts near an open flame, cooking or other heating appliance.
10. Do not operate any appliance with damaged cord or plug after the appliance malfunctions or have been dropped or damaged in any manner.
11. The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
12. Do not use outdoor.
13. Do not let cord hang over the edge of table or counter or touch a hot surface
14. To disconnect grip plug and pull from wall outlet, never pull on cord

15. Always use on a dry level surface
  16. Not operate without fan grilles properly in place
  17. This product is intended for household use only and not for commercial or industrial use
- Warning**  
 \*To reduce the risk of fire or electrical hazard. Do not use this fan with any solid state speed control device  
 \*Unplug or disconnect the fan from the power supply before servicing.

### Read and Save these Instructions

If fan work with button only, it is 3 speed, and you can push the button to use it from 1,2,3

If the fan with Remote Control Functions

1. Time-8 hours Timer available with each setting 1 hour variance
2. ON/OFF- Turn on or Turn off the fan
3. Speed- 1 to 8 speed for your comfortable
4. Screen- Turn on or Turn off the Screen

NB-All functions above will work manually without the need for remote control by using the push button control pad

-Insert the insulating paper into the remote control unit when not in use

### How to Assemble:

1. First, take out all fan accessories from the packaging box, including 1 set of fan grilles (front and rear and 3 pcs screws for rear grilles), 1 fan blade, 1 set of base, 1 fan head, 2 support columns, 1 support column lock nut, and 1 instruction manual. Check if all accessories are intact, then remove all plastic bags.
2. Take one support column, align it with the hole on the base and insert it into the base. Slide the support column lock nut over the support column, then tighten the support column and base clockwise.
3. Insert the threaded end of the other support column into the first support column and tighten it clockwise. Then install the fan head onto the two support columns in the same way.
4. Remove the fan cap and fan head nut from the fan head, attach the rear grille to the fan head, then tighten the fan head lock nut clockwise.
5. Slide the fan blade onto the fan head shaft, align the groove on the fan blade with the notch on the shaft, then tighten the fan blade lock nut clockwise. Attach the front grille to the rear grille by aligning the corresponding clips, and check if all clips are fully engaged. Then fix 3 screws into the rear grilles holes.
6. Check that all accessories are installed properly. Confirm the Voltage is 220V/50Hz, Then Insert the plug into the socket.
7. Then take out the remote control and remove the insulating paper from its tail end. Point the remote control at the fan and press the corresponding function buttons—then the fan can operate normally.

